Special Projects Category C
Transit Oriented Development Location Criteria

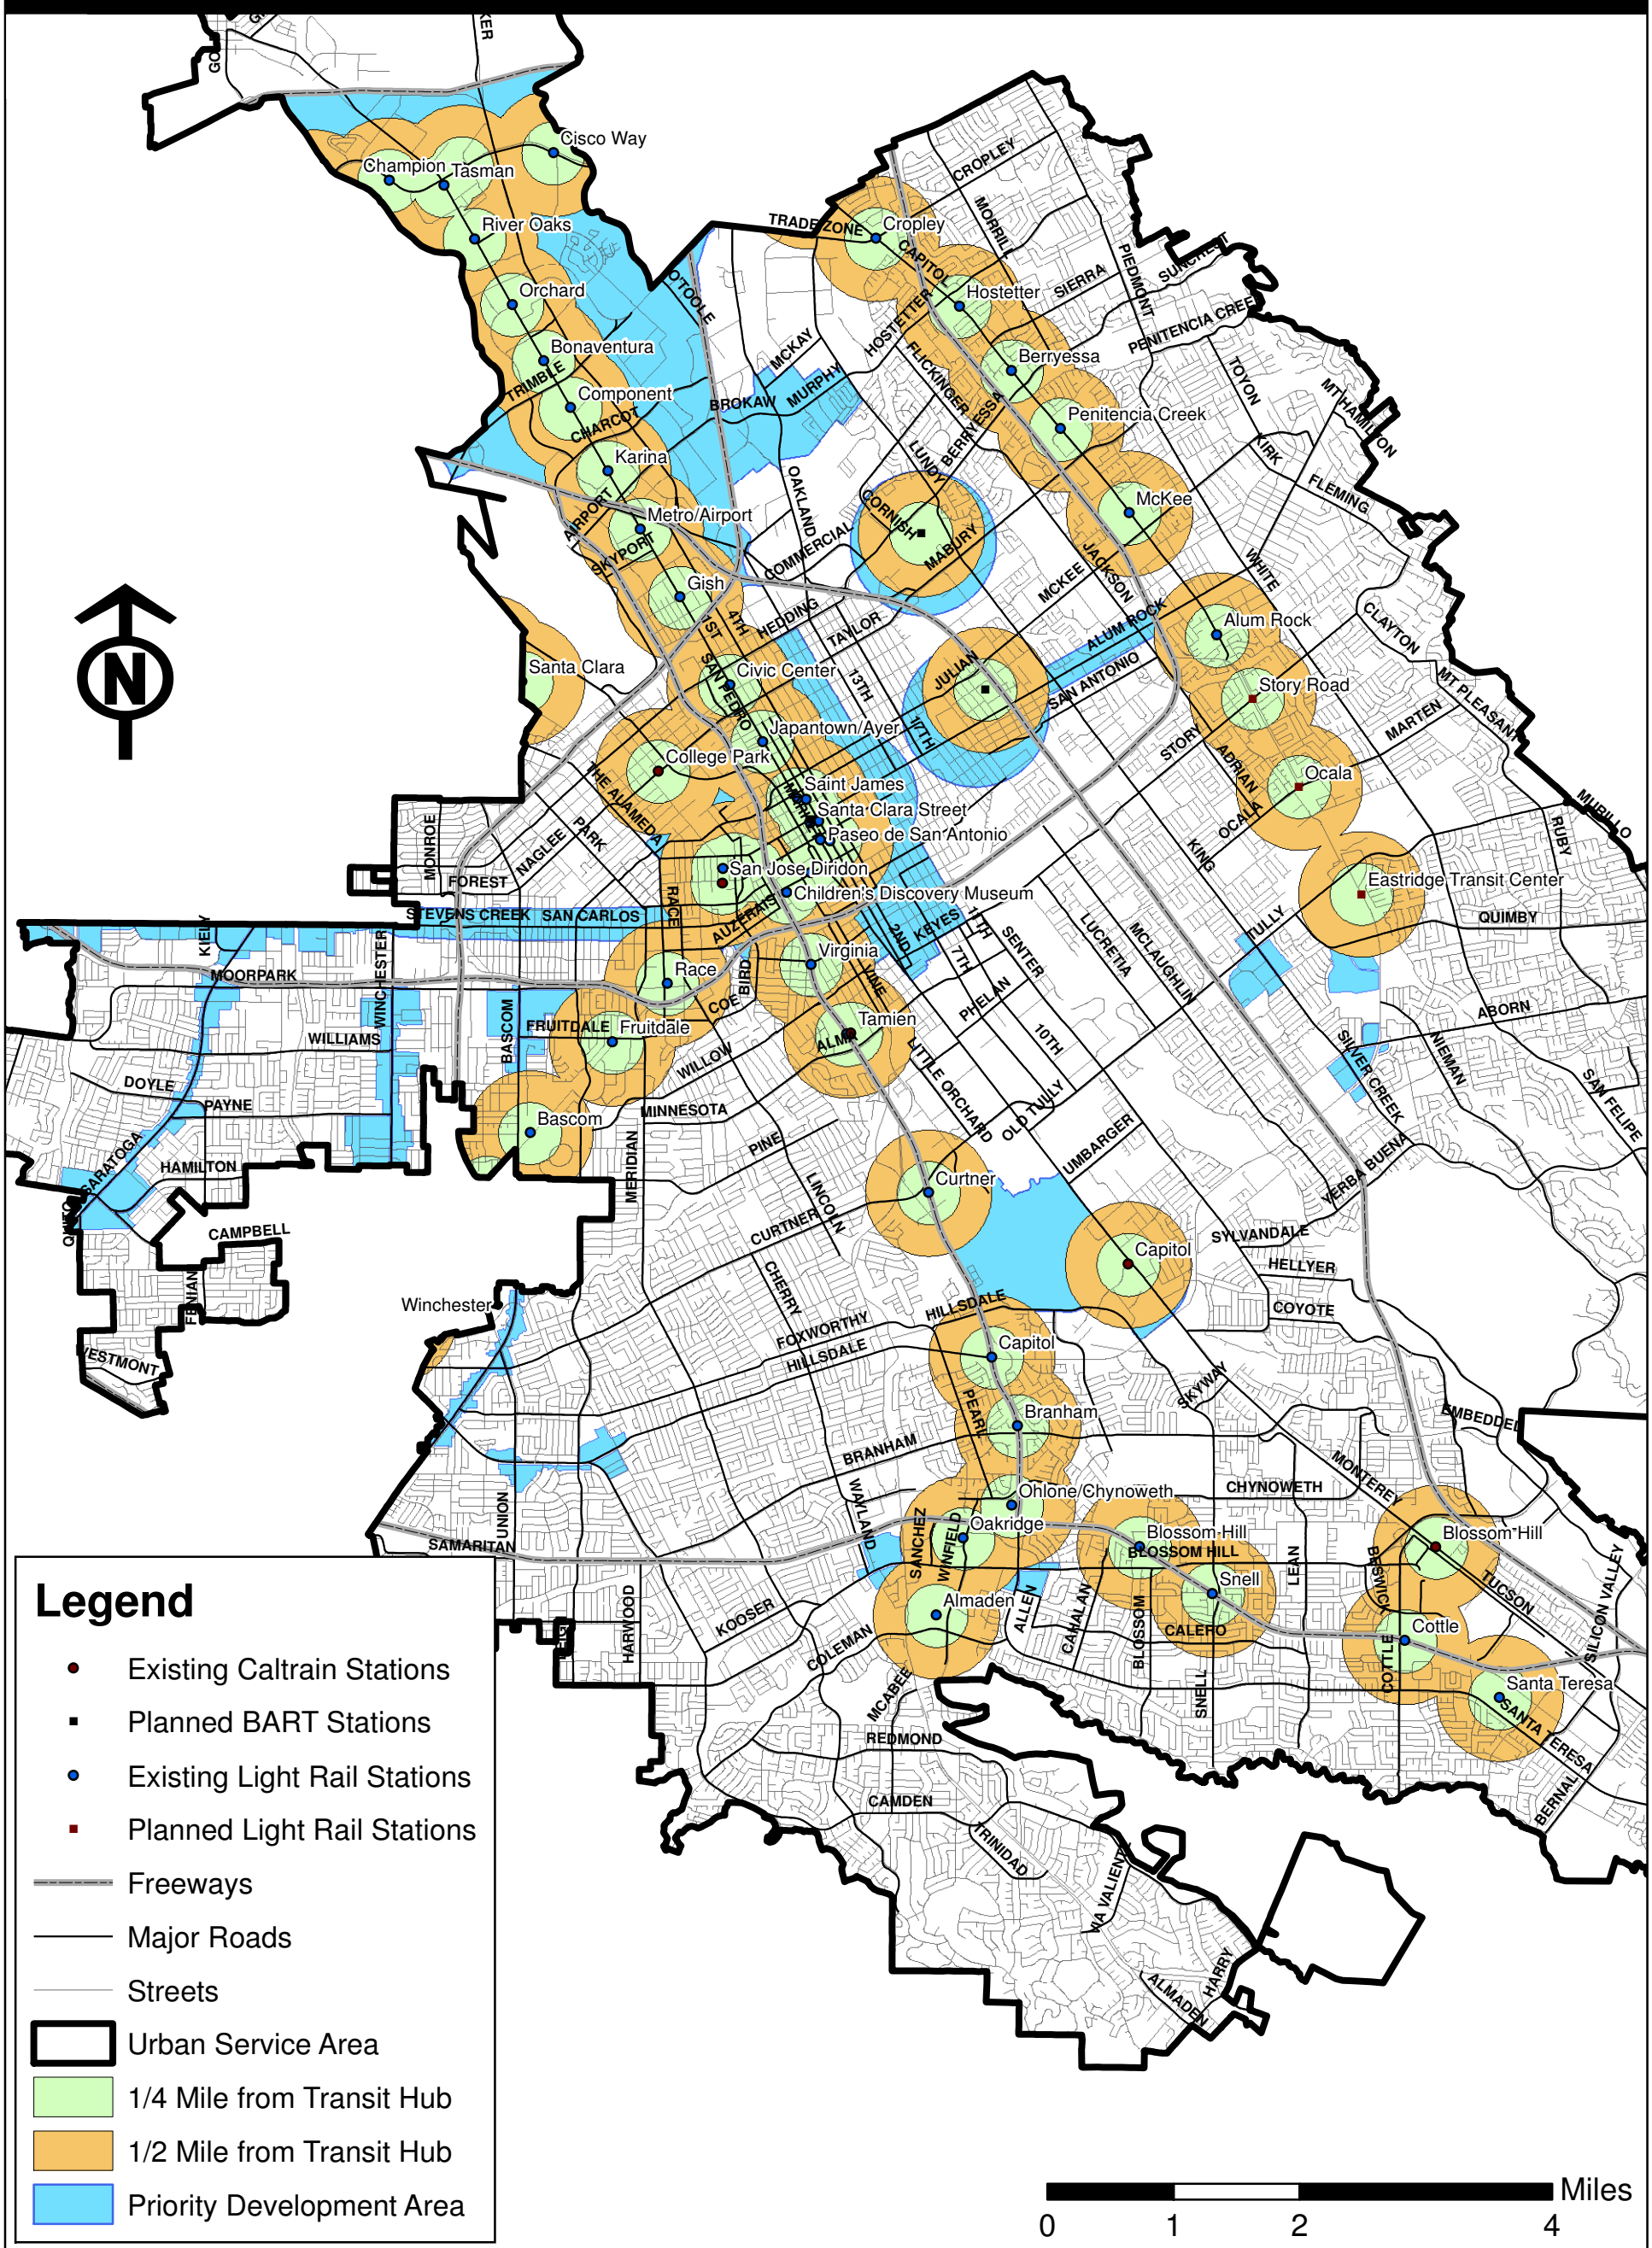

Map Notes: This map is for screening of location criteria only. Special Projects are smart growth projects (e.g., small urban infill, high density, or transit oriented development) that can recieve LID treatment reduction credits and use specific types of non-LID stormwater treatment measures.

A Priority Development Area (PDA) is an infill development area formally designated by the ABAG/MTC's FOCUS regional planning program. PDAs do not consistently align with 1/4 mile or 1/2 mile transit hub buffers.

Data Sources: ABAG, City of San Jose, VTA

March 2012